

Currently showing all channels/presets

Click to add this channel as a favorite

This channel is a numbered shortcut

Currently showing only numbered shortcuts

Currently showing only favourites

## **HOTKEY SHORTCUTS**

Left Ctrl + Left Alt + C: Launch the OSD

Left Ctrl + Left Alt + X: Disconnect the current receiver

Left Ctrl + Left Alt + A: Re-connect to the last channel

Left Ctrl + Left Alt + V: Change to the video-only mode

Left Ctrl + Left Alt + S: Change to the shared mode

Left Ctrl + Left Alt + E: Change to the exclusive mode

Left Ctrl + Left Alt + P: Change to the private mode

Left Ctrl + Left Alt + 3: Connect to the channel/preset saved in shortcut slot 3



## SORTING ICONS

**FAVOURITE ICONS** 

Currently showing channels and presets. Click to change

Currently showing only channels. Click to change

Currently showing only presets. Click to change

Filter this column using the specified term

X Remove the search filter

Click to sort the list in ascending order via this column

The list is sorted in ascending order via this column

## **CONNECTION BUTTONS**

There are four connection modes:

**Video-Only:** Allows users only to view the video output, the USB channel is denied.

**TOP CORNER ICONS** 

Close the OSD

Enter 'Remote OSD' mode

XX Exit 'Remote OSD' mode

Display the help pages

Refresh the current page

**Shared:** Allows users to control a system in conjunction with other users.

**Exclusive:** Grants exclusive control to one user while all others can simultaneously view and hear, but not control, the output.

**Private:** Allows a user to gain private access to a system, while locking out all others.

Connection buttons shown in blue are ready to select. Icons in green have been selected by another user and those shown in **gray** are not available.

End this connection